



RECEIVER RX4

The RX4 model is a rolling receiver which Works at 433.92 MHz frequency; it is provided with four monoestable channels that let use till four different doors.

RX4 receiver programming:

- Activate the programming button (PROG) on the receiver and you will listen 2 short beeps. It is already on programming way.
- Once in programming way, please register the chosen transmitters by pressing any button on each transmitter; for any receiver programmed it will emit a short beep.
- To leave programming way, follow next instructions:
 - Wait 30 seconds for the receiver to leave programming by itself.
 - Activate programming button on the receiver.
 - Press one channel on any of the transmitters which are already registered, except for the last one which has been programmed.
- Receiver indicates that it has left programming by means of three beeps.

